

# Trespa Perspectives Depth

Curved elements reveal new dimensions

## DISCLAIMER

### General

These terms apply to the use of this document and such use automatically means that the other party agrees to these terms. The information provided by Trespa International B.V. ("Trespa") in this document is solely indicative. Trespa is unable to warrant the accuracy and completeness of this information. Trespa may change the information included in this document at any time and without further notice. Trespa's customers and third parties must ascertain that they have the most recent document (for the most recent version, please consult: [www.trespa.com](http://www.trespa.com)). No rights can be derived from the information provided; the use of the information is at the other party's risk and responsibility.

Trespa does not warrant that the information in this document is suitable for the purpose for which it is consulted by the other party. This document does not contain any design, structural calculation, estimate or other warranty or representation that customers and third parties may rely on. This document does not guarantee any properties of Trespa products. Colours used in Trespa's communications (including but not limited to printed matter) and in samples of Trespa's products may differ from the colours of the Trespa products to be supplied. Samples are not intended for use in product tests

## CONTACT US

**Trespa International B.V.**  
P.O. Box 110, 6000 AC Weert  
Wetering 20, 6002 SM Weert  
The Netherlands  
[www.trespa.com](http://www.trespa.com)

**Customer Service Desk  
EMEA Export**  
Tel.: +31 (0) 495 458 359 / 573  
Fax: +31 (0) 495 458 383  
[infoexport@trespa.com](mailto:infoexport@trespa.com)

**Trespa UK Ltd.**  
Grosvenor House  
Hollinswood Road  
Central Park, Telford  
Shropshire, TF2 9TW  
United Kingdom  
Tel.: +44 (0) 1952 290707  
Fax: +44 (0) 1952 290101  
[info@trespa.co.uk](mailto:info@trespa.co.uk)

and are not representative of characteristics of the Trespa products. Trespa's products and samples are produced within the specified colour tolerances and the colours (of production batches) may differ, even if the same colour is used. The viewing angle also influences the colour perception. Metallics panels feature a surface whose colour appears to change based on the direction from which it is viewed. The specified colour stability and colour specifications relate only to the decorative surface of the Trespa products, not to the core material and samples of the Trespa products. Trespa products are delivered ex-works with straight, sawn sides.

Customers and third parties must have a professional adviser inform them about (the suitability of) the Trespa products for all desired applications and about applicable laws and regulations. Trespa does not warrant the above.

The most recent version of the current delivery programme and the Material Properties Datasheet can be found at [www.trespa.info](http://www.trespa.info). Only the information in the most recent and valid Material Properties Datasheet should be used to select and provide advice regarding Trespa products. Trespa reserves the right to change (the specifications for) its products without prior notice.

**Trespa North America Ltd.**  
12267 Crosthwaite Circle  
Poway, CA 92064  
United States of America  
Tel.: 1-800-487-3772  
Fax: 1-858-679-9568  
[info.northamerica@trespa.com](mailto:info.northamerica@trespa.com)

**Trespa China Co. Ltd.**  
Room 2604-05, HuaiHai Plaza  
No. 1045 HuaiHai Road (central)  
ShangHai 200031  
P.R. China  
Tel.: +86 (0) 21 6288 1299  
Fax: +86 (0) 21 6288 1296  
[infochina@trespa.com](mailto:infochina@trespa.com)

**Customer Service Desk  
Asia/Pacific**  
Tel.: +86 (0) 21 5465 8388  
Fax: +86 (0) 21 5465 6989  
[infoapac@trespa.com](mailto:infoapac@trespa.com)

### Liability

Trespa is not liable (neither contractual nor non-contractual) for any damage arising from or related to the use of this document, except if and to the extent that such damage is the result of wilful misconduct or gross negligence on the part of Trespa and/or its management. The limitation of liability applies to all parties affiliated with Trespa, including but not limited to its officers, directors, employees, affiliated enterprises, suppliers, distributors, agents, and representatives.

### General conditions

All oral and written statements, offers, quotations, sales, supplies, deliveries and/or agreements and all related activities of Trespa are governed by the Trespa General Terms and Conditions of Sale (*Algemene verkoopvoorwaarden Trespa International B.V.*) filed with the Chamber of Commerce and Industry for Noord- en Midden-Limburg in Venlo (NL) on 11 April 2007 under number 24270677, which can be found on and downloaded from the Trespa website, [www.trespa.com](http://www.trespa.com).

All oral and written statements, offers, quotations, sales, supplies, deliveries and/or agreements and all related work of Trespa North America, Ltd. are governed by the Trespa General Terms and Conditions of Sale, which can be found on and downloaded from the

Trespa North America Ltd. website, [www.trespa.com/na](http://www.trespa.com/na). A copy of these general conditions of sale will be provided free of charge on request.

All general terms and conditions other than the conditions mentioned above are dismissed and do not apply, regardless of whether such terms and conditions are referred to on requests for offers, offer confirmations, stationery and/or other documents of the other party, even if Trespa does not expressly object to such terms and conditions.

### Intellectual property

All intellectual property rights and other rights regarding the content of this document (including logos, text and photographs) are owned by Trespa and/or its licensors. Any use of the content of this document, including distribution, reproduction, disclosure, storage in an automated data file or the dispatch of such a file without Trespa's prior written consent is explicitly prohibited. © Trespa, Meteon, Athlon, TopLab, TopLab<sup>PLUS</sup>, TopLab<sup>ECO-FIBRE</sup>, Virtuon, Volkern, Trespa Essentials and Mystic Metallics are registered trademarks of Trespa.

### Questions

Should you have any questions or comments, please do not hesitate to contact Trespa.

[www.trespa.com](http://www.trespa.com)

## VISIT US

**Trespa Design Centre  
New York**  
62 Greene Street (Ground Floor)  
New York, NY 10012  
United States of America  
Tel.: 1-212-334-6888  
Fax: 1-866-298-3499  
[info.ny@trespa.com](mailto:info.ny@trespa.com)  
[www.trespa-ny.com](http://www.trespa-ny.com)

**Trespa Design Centre  
Barcelona**  
Calle Ribera 5,  
08003 Barcelona  
Spain  
[info.barcelona@trespa.com](mailto:info.barcelona@trespa.com)


Curve your  
façade,  
think Trespa

Sloping lines and asymmetric shapes form the inspiration for accessible designs with a natural flow. Always surprising, always dynamic.

TRESPA®


## Let your ideas float

Let your imagination twist and curve when designing with new shapes and new dimensions. Trespa's panels and fixing system will twist and curve along with you.

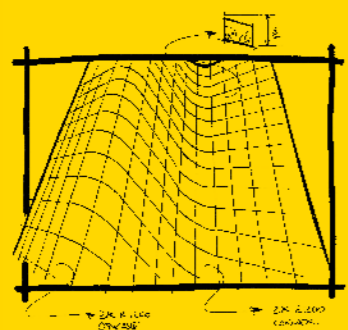


## Dimensions with a soft touch

Trespa Curved Elements offer opportunities to design with new shapes. Soft curvatures and pointed relief lend your designs a modern character.

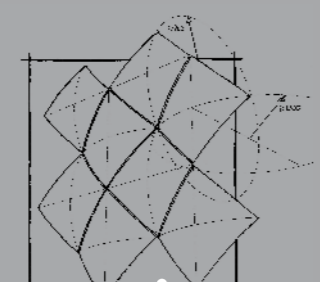

## Design in motion

The effects of light and the undulation of the elements let you perceive the building as if it is in motion and give it a dynamic appeal.

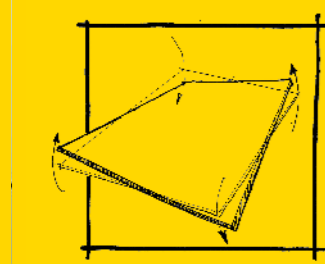


**Inspiration comes to life**  
With a broad range of colours, finishes and tactile effects, Trespa Meteon brings compelling aesthetic and nearly limitless design possibilities to next-generation architectural claddings. Depending on the architectural concept, Trespa Meteon can contribute effectively to energy efficient, healthy building designs with a positive impact on long-term performance and value. Come and be inspired: <http://perspectives.trespa.com>

The designs shown in this brochure are for inspiration only and have not been submitted to specific tests. Actual designs may vary, depending on specific location, regulations and circumstances. Design and fixing systems may influence possible end results. Trespa Meteon is CE marked and fully complies with the EU standard. Always check if the desired design is in accordance with any national and/or local building regulations and specifications.

# Depth

## Curved elements reveal new dimensions

Perspectives is Trespa's medium for constantly creating new space, new design freedom. Trespa Curved Elements add a new, ground-breaking and inspiring chapter to your options. Let yourself be inspired by curves, waves and rounded shapes. Let the light play with the new dimension. Create surprising and lively patterns and designs, fascinating structures, façades with an industrial appeal or a futuristic look. The result will be an extraordinary effect of depth combined with an exciting interplay between light and dark. No matter whether you're designing a flat or a curved façade, your design freedom has been given a new dimension. Trespa can produce various curves.

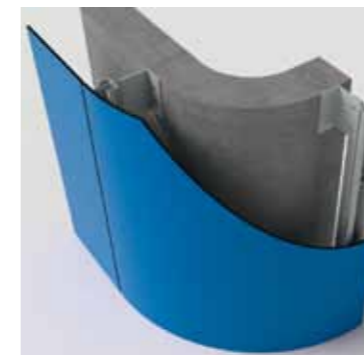

Cabinet Vigier, France

AGS Architekten & Planners B.V. BNA, The Netherlands


Archi concept, France

# TRESPA CURVED ELEMENTS

To add a new dimension to your design options Trespa has introduced Trespa Curved Elements. Further information on the possibilities is provided below detailing the various shapes, sizes and colours available. Trespa Curved Elements are available in 10 mm thickness and comply with Euroclass B-s2,d0 for reaction to fire.

## Curved panels

The panels are formed in one direction; the radius is usually measured on the decorative side of the panel.

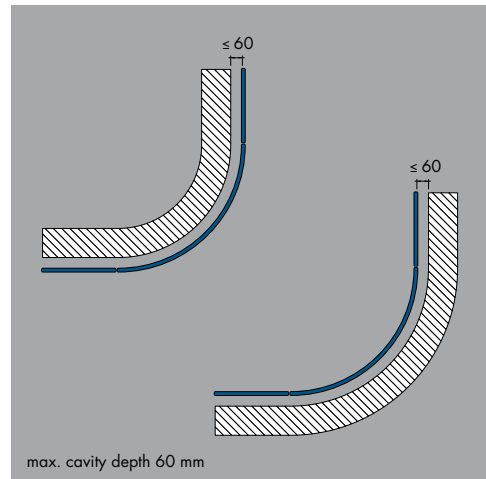


The standard radii are listed below.

Outside corner	Max. height (mm)	Max. angle	Inside corner	Max. height (mm)	Max. angle
980	1300	90°	970	1300	90°
1300	1300	90°	1290	1300	90°

Other radii are possible in consultation with Trespa. For exact specifications and tolerances on sizes please contact your Trespa specialist.

### Colours and textures

Virtually all Trespa colours can be used for curved panels, with the exception of Wood Decors, Naturals and Gloss Textures. We would like to remind you that the surface determines the direction when using Metallics. For certain radii and panel dimensions, the direction of all panels is determined by the curved panel. Please note that longer delivery times apply to our curved panels.

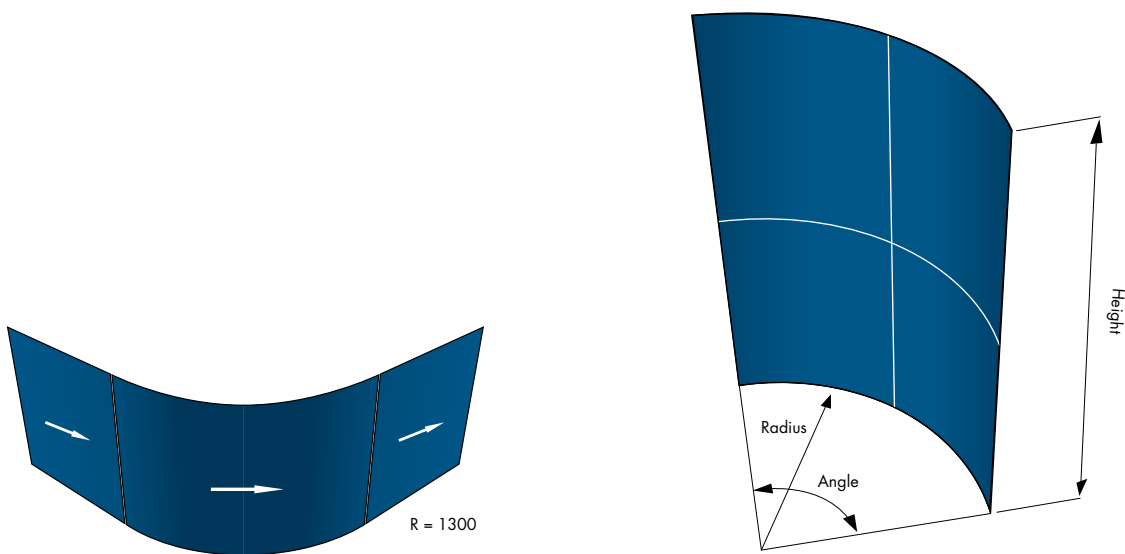

In case of Metallics the direction of both the flat panels and curved panels need to be aligned.





### **Fixing systems**


Both visible and invisible mechanical fixing systems can be used for fixing Trespa Curved Elements. For this standard systems must be adapted to the size and shape of the Trespa Curved Elements. Please contact your Trespa specialist to discuss most suitable options.

### **Panels curved over a single axis**

Panels of 10 mm may be fixed invisibly by attaching metal hanging brackets with inserts or screws to the back of the panel. The panels are fixed to a metal subframe. Each panel has two adjusting points and a fixed point at the top, so adjusting is possible and unwanted movement of the whole

panel cannot happen.

Lower brackets fixed higher at such a level as to facilitate downward panel movement (2.5 mm/m<sup>1</sup>).

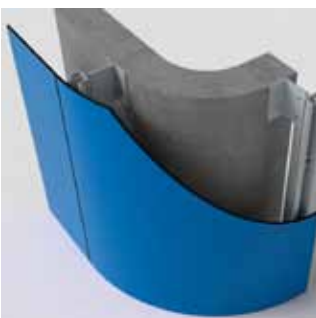

**See other Trespa Perspectives brochures and [www.trespa.com](http://www.trespa.com) for more examples of Trespa Curved Elements.**

